
Lift Shaft Size Guide - Powerglide Elevators

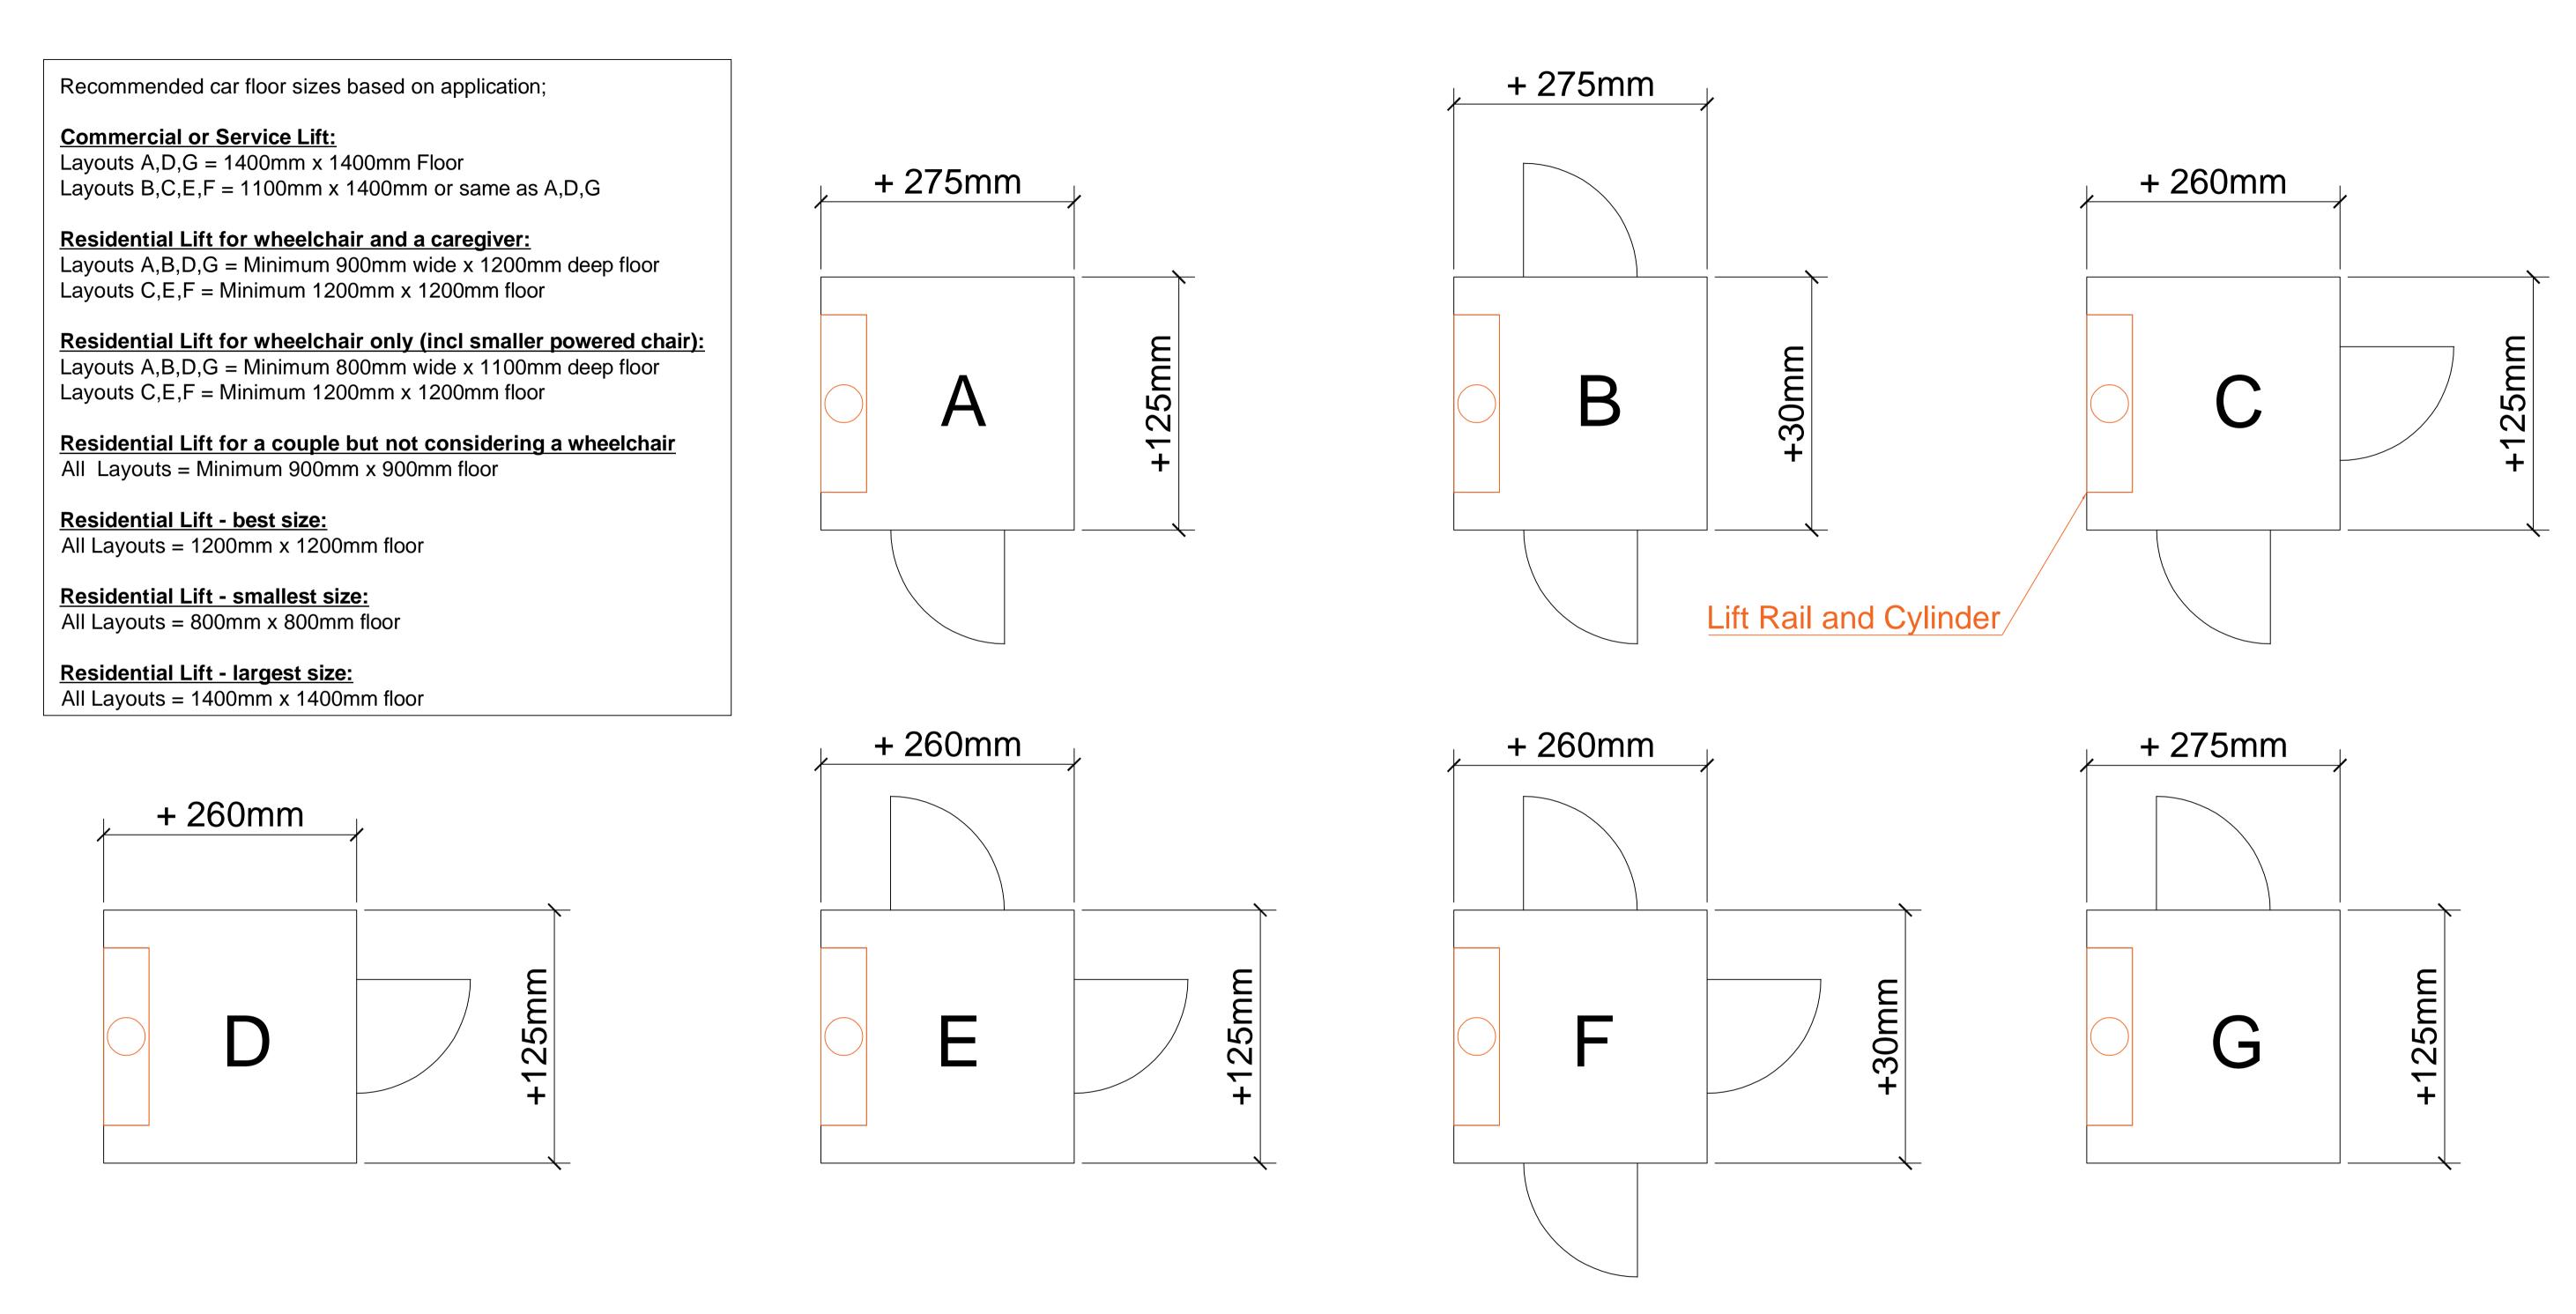

To use this Lift Shaft Size Guide to calculate your LIFT SHAFT size, add the numbers on each layout to your desired floor size

To use this Lift Shaft Size Guide to calculate your <u>LIFT CAR FLOOR</u> size, subtract the numbers on each layout from your available lift shaft internal size Lift car can be square or rectangle and can have more than one door per floor if required. Doors can hinge in opposite direction to what's shown here.