## Installation Guide



# Before beginning the installation of your steel windows and doors ensure you:

- Clean the openings.
- Make sure the surfaces are level and plumb.
- Read all drawings and check all sizes are correct. A set of drawings is included with delivery.

#### Have the following tools available:

- Laser with 360 degree function to set your line in the opening (preferable)
- Impact Driver
- Drill
- Clamps (make sure they are clean)
- Tape measure to check or identify frame sizes
- Rubber hammer or mallet for tapping frames into place (note this may not be required depending on tolerance)
- Plastic Packing (for Australian made, well priced packers we recommend Sregdor)



## Delivery of your steel windows and/or doors:

- · When the truck arrives, hand unload your frames. Using a forklift may damage them.
- Unload to a clean area, out of the weather.
- Once unloaded, return the A-frame to the truck as this will be returned to us.



## Beginning the first elevation:

#### Have the following tools available:

- 1. Locate all related frames.
- 2. Set a line in the chosen opening to work and align your frames to.
- 3. Join any frames required. M5 joining screws are provided in the hardware box.
- 4. Place frames into opening and temporarily hold with clamps.
- 5. Plumb and level frames, making sure all horizontal bars align.
- Once happy, pack the frames and fix off where needed using appropriate screws.Our frames will have a tolerance built in so packing should be required and is critical.

- 7. Frames must not be installed by over-tightening the fixings this will cause the steel to bow or bend.
- 8. Please use plastic packaging then ensure fixings are tight this will avoid frames bowing or bending unnecessarily.
- 9. Once fixed off, check the following:
  - Doors and windows operate
  - All bars align
  - Visually, it looks right

# steel window design.

27-29 Raglan Street, Preston VIC 3072

0434 843 426 info@steelwindowdesign.com.au







**O F O** steelwindowdesign