


# Fixing Cornice

## Fixing into position


Mix bonding compound to instructions on bag.

Spread a bead of bonding compound along full length of the cornice or scotia.

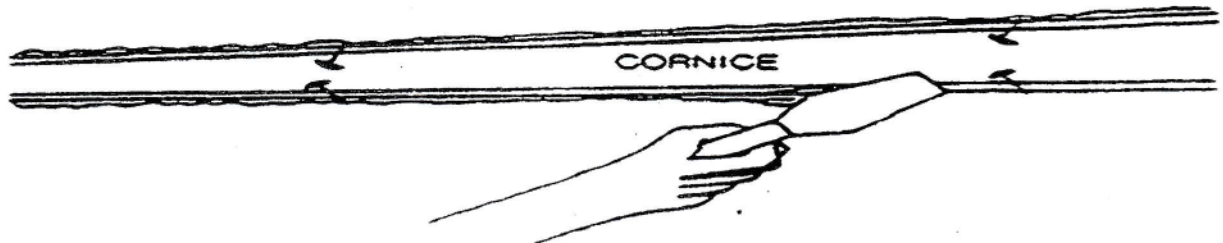


Press the buttered cornice firmly into the wall and ceiling angle, extruding surplus bonding compound.

Pin in position by temporary nailing top and bottom edges of cornice.

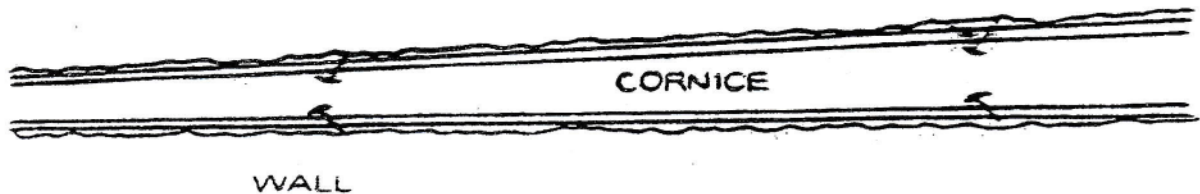

Clean off excess compound with a small broad knife or the heel of a small tool.

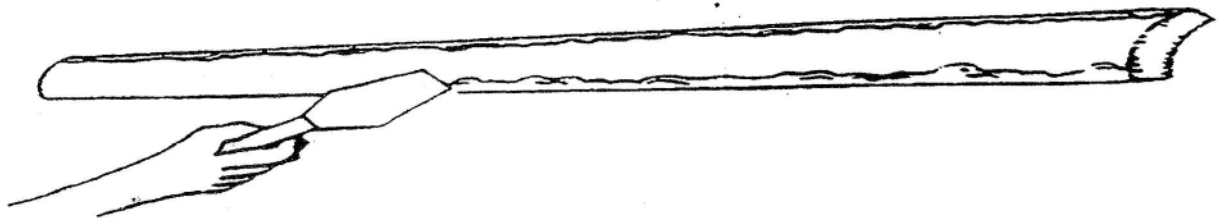

## Flush Jointing

After ensuring that grouting of ceiling and bonding compound on cornice has set, remove all temporary nails.

Mix stopping compound as per instructions on bag. Using steel trowel apply sufficient stopping compound for joint to finish proud.

Immediately this filler coat has set, using steel trowel cut off excess stopping compound.

The joint is then ready for final flushing using a steel trowel and small quantity of stopping compound. Use same principle to flush where nails removed from body of sheets.